


EASY TOUCH MIRROR WARMER

Operator & Owner's Manual
Model #06151



api
anthony products, inc.

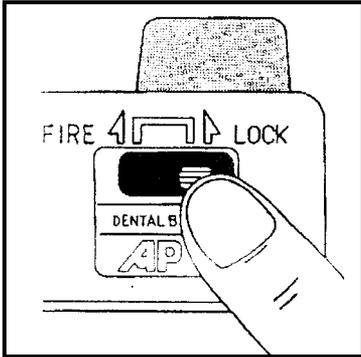

OPERATION

1. Push the red lock lever up to release the **LOCK/FIRE** button from the **LOCK** position.
2. While holding the red lock lever up, slide the black **LOCK/FIRE** button to the left **FIRE** position.
3. Depress the large black button on the top

AFTER USE

1. Push the red lock lever up.
2. While holding the red lock lever up, slide the **LOCK/FIRE** button to the right **LOCK** position.
3. Make sure the red lock button returns to the “down” position. The red lock button should automatically return to the down position when it is released.

FUEL FILLING

1. The **LOCK/FIRE** button must be in the **LOCK** position and then the battery must be removed for safety when fuel filling.
2. Don't shake the unit and fuel container. Don't move them when fuel filling.
3. Fill the mirror warmer with fuel through the inlet marked **GAS** on the bottom. The mirror warmer uses conventional butane gas sold for refilling butane cigarette lighters. Follow the filling instructions on the fuel container.

BATTERY INSTALLATION

Remove the small sliding panel on the bottom of the mirror warmer and install a SUM-3 1.5V battery.

NOTE: When sparking becomes weak the battery should be replaced.





OPERATOR SERVICING

When the burner pipe becomes foul with wax, etc. poor ignition may occur. Clean the burner pipe in the following manner:

1. Remove the steel burner cover.
2. Disconnect from the burner pipe.
3. While holding brass nut at the bottom of the burner pipe, unscrew the burner pipe and remove it. (A 7mm wrench may be needed to hold the brass nut)
4. Clean the burner pipe with a cotton swab or the like.
5. Remove the wax which has accumulated on the burner pipe with hot water.
6. Perform the above operations in reverse order to reassemble the mirror warmer.

CAUTION

1. Remove the battery when transporting or after use.
2. Do not use a weighted object to keep the large black button depressed.

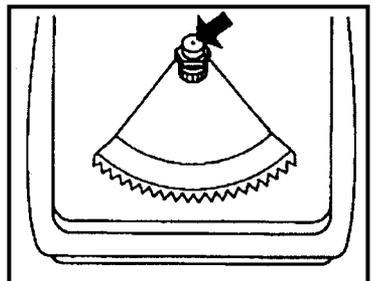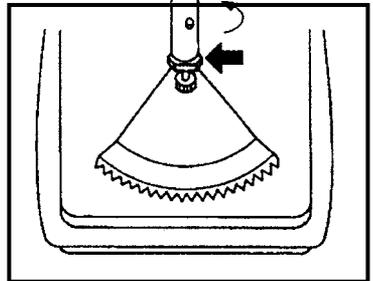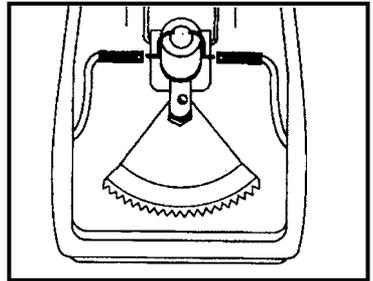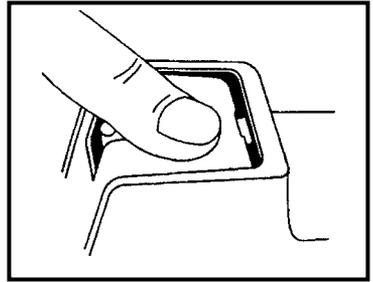

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No spark	Battery installed incorrectly	Install battery in correct position (+ -)
	Weak battery	Replace battery
	Improperly connected spark wires	Make sure wires are connected securely and properly
Does not flame when sparked	No fuel	Fill with fuel
	Improper adjustment of fuel adjustment wheel	Adjust fuel adjustment wheel while depressing large black button several times to maintain spark
Ignites but flame goes out quickly	Flame adjusted too high	Adjust fuel adjustment wheel for a smaller flame
Flame is unstable	Flame adjusted too high	Adjust fuel adjustment wheel for a smaller flame
	Burner pipe is fouled	Clean the burner pipe with a cotton swab
	Too much fuel goes into the pipe	Push the center of the fuel inlet to release a small amount of fuel



anthony products, inc.

7740 Records Street • Indianapolis, IN 46226
 (317) 545-6196 • 800-428-1610 • Fax (317) 543-3289
www.anthonyproducts.com